INSTALLATION GUIDE



Thus section deals with installation recommendations for wastewater systems. Included are recommendations for sizing the pipeline risers and the placement of air valves on the various sections of the system. Further information can be obtained by contacting the local agent or the A.R.I. applications engineering dept.


Recommendation for Riser Dimensions

d=D for $D \le 12$ Inch

d=0.6 D for $12 Inch < D \le 60 Inch$

 $d \ge 0.35 D$ for D > 60 Inch

 $h \ge D$ or h=D/2 and $h \ge 6$ Inch

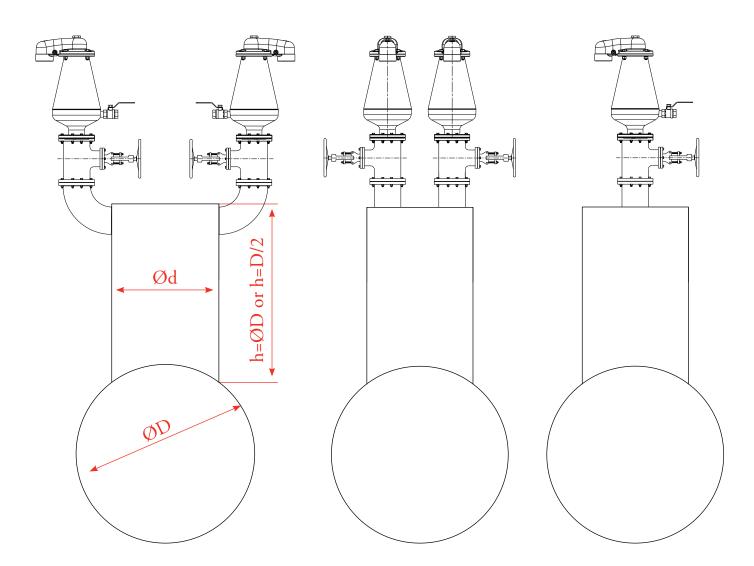





Sample Setups for Pump Stations

Air Valve Location:

An air valve shall be installed between the pump and the check valve.

The diameter and pressure of the air valve will be determined according to the design of the system.

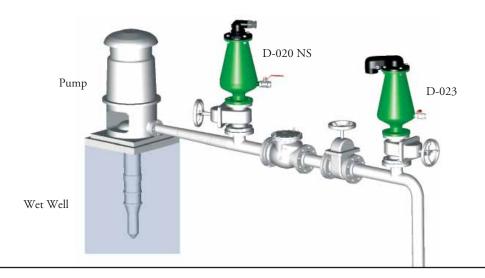

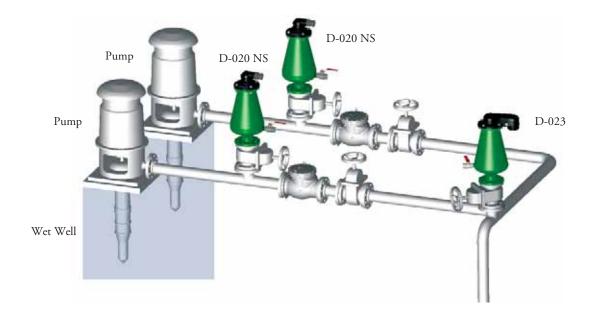


INSTALLATION GUIDE



Air Valve Type According to Pump Type:

A non slam type combination air valve shall be installed after a submersible or suction type pump. An automatic air valve shall be installed after the dry well pump.

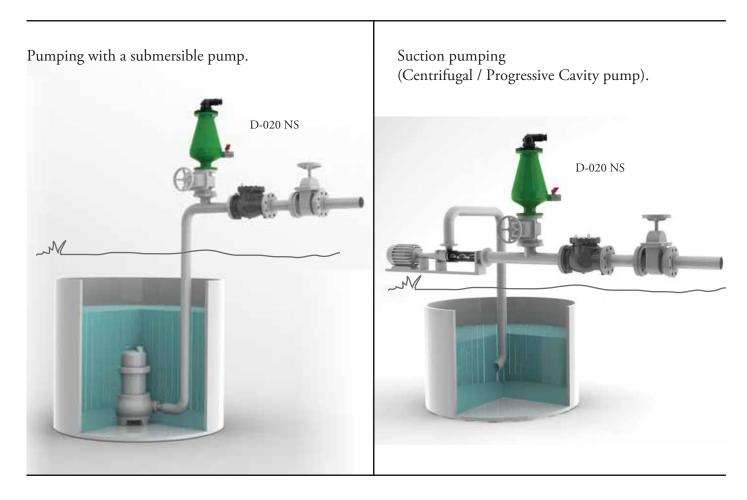



Dry well pumping.





Sample Air Valves Applications at Isolating Valves

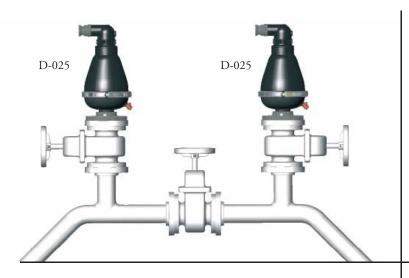


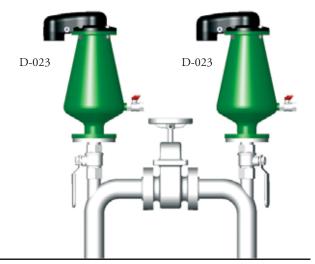







Sample Installation Scheme for Underground Air Valves

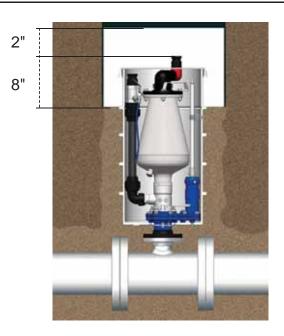




Air Valve Location at Pump Stations and on Transmission Lines

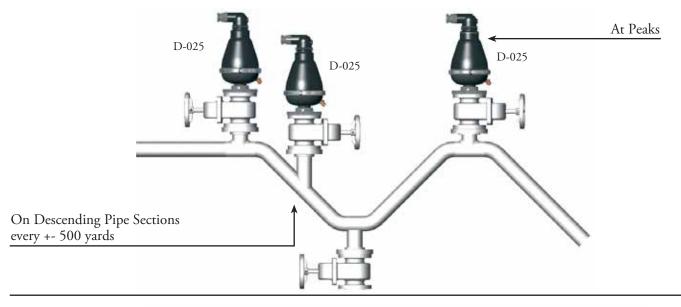


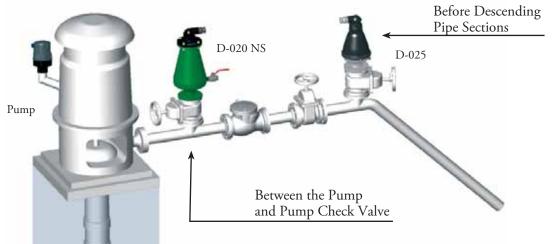


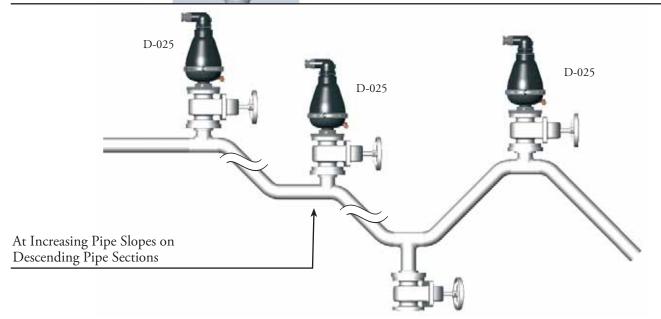

INSTALLATION GUIDE



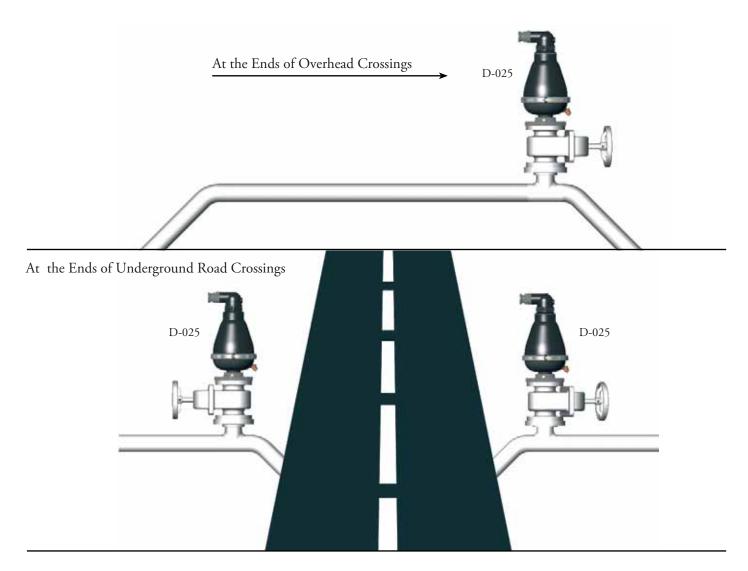

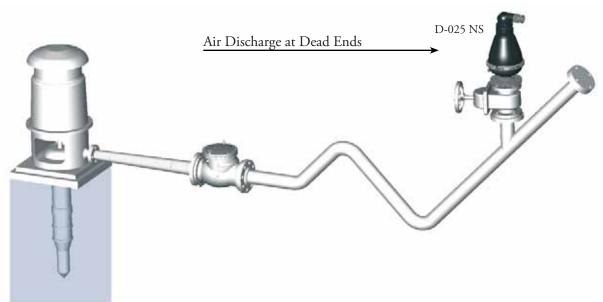

A.R.I. FLOW CONTROL ACCESSORIES Ltd. www.arivalves.com e-mail: ariusa@ari.co.il Tel: (559) 269-9653 A.R.I. FLOW CONTROL ACCESSORIES Ltd. reserves the right to make product changes without prior notice. To insure receiving updated information on parts specifications, please call the export dept. at the A.R.I. factory. A.R.I. FLOW CONTROL ACCESSORIES Ltd. shall not be held liable for any errors. All rights reserved.